

# IGNITION CABLE KIT

## REPLACEMENT PROCEDURE



### GENERAL INFORMATION

- Operate only the engine is cold, and with clean coil, spark plug and cap connections.
- Cables must be replaced individually, avoiding pinching or damaging them.
- New cables must be assembled following the correct ignition order, without keeping them too close to each other.
- Check that caps and terminals are connected completely. We recommend a thin film of infusible silicone lubricant in the spark plug side cap.

